


Données relatives à l'échantillon prélevé	
Origine	Genetti SA
Emplacement	Riddes
effectué par:	Paulo dos Santos
Remarques:	varie selon extraction

Courbe de mélange (Composition)		
TV Rhône dv	90%	05.02.02 mel1
TV Rhône cr	10%	05.02.02 mel2
total	100%	

Tamis	Recette
mm	mélange
0.063	0.32
0.08	0.27
0.10	1.09
0.125	1.92
0.16	2.74
0.20	3.57
0.25	4.39
0.32	5.22
0.40	6.41
0.50	7.60
0.63	8.79
0.80	9.99
1.00	11.18
1.25	12.37
1.60	13.57
2.00	14.76
2.50	15.95
3.15	16.97
4.00	18.00
5.00	19.02
6.30	22.05
8.00	25.07
10.00	28.09
12.50	31.12
16.00	34.14
20.00	37.17
25.00	50.91
31.50	64.66
45.00	78.40
63.00	92.15
90.00	99.21

Courbe de composition de la grave selon SN 670 120c

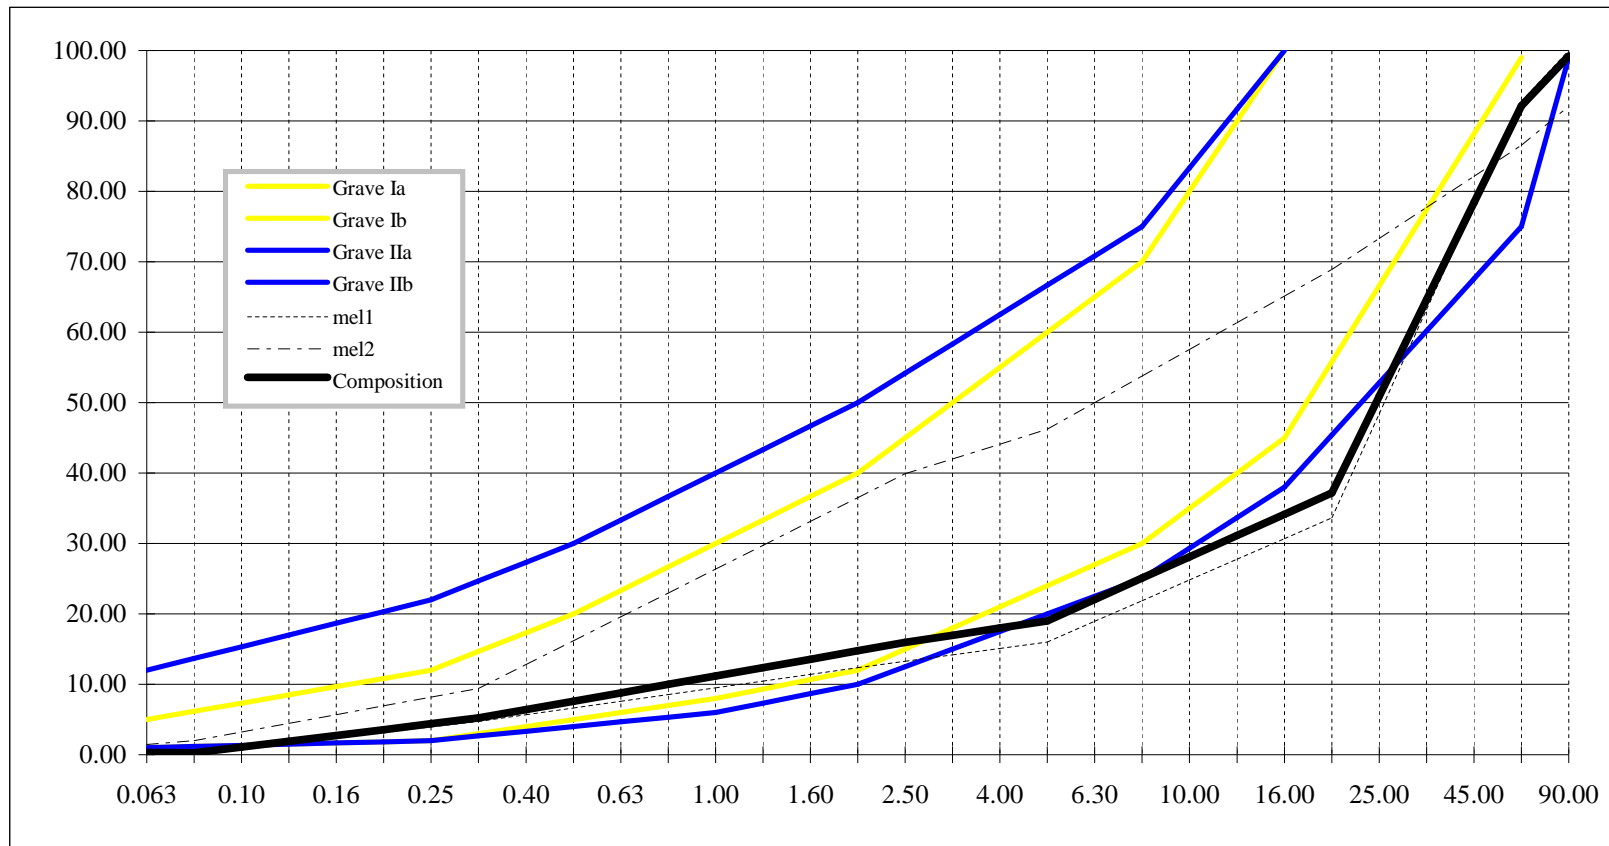

courbe et explicatifs diponibles sur www.genetti.ch